



**A - Enabling ThermaStart...**

1. Park the vehicle with the engine running.



2. Turn operator switch **ON**

a. Wait for **ORANGE** flash




3. Turn Ignition **OFF**

a. Engine will continue to run in WARM-UP




4. Make sure the Machine Lock is active.

It will always be active with Operator switch in the ON position. Check when arming system and when on the ground.

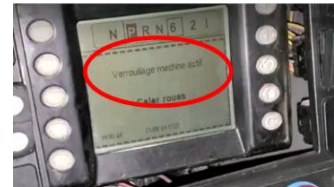

**B - ThermaStart Monitors...**

**ENGINE TEMPERATURE**

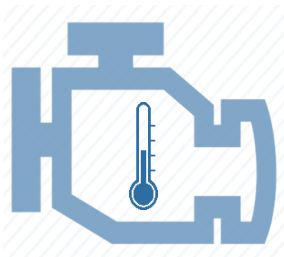

**BATTERY VOLTAGE**




**AIR PRESSURE**




**C - If Temperature, Voltage or Pressure drop below threshold...**

**1- START CYCLE**

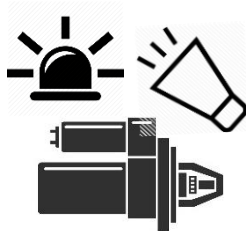

**2- RUN CYCLE**

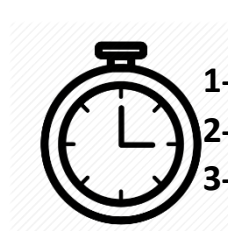

- 1- Warm-Up-90 s
- 2- Fast Idle-5 min
- 3- Cool-Down-90 s

**3- STANDBY**

